


# Raw Brass Stampings Contd

E52

**Prongs:** ideal for use on leather and fabric.



P2814



P483




P3046




P2721



P5710

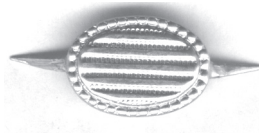


P2756

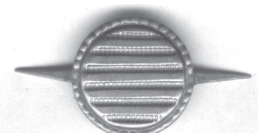


P2758




P2757




P2806



P2805



P2789




P2788



P2883




P2697




P2787




P1493



P5764



P751




P2499



P130




P2498

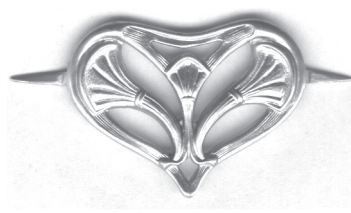


P2657



P1226

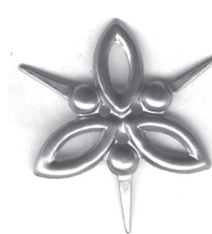

P2119

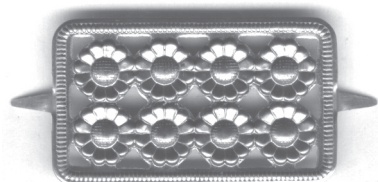

P5254




P335



P6539



P179

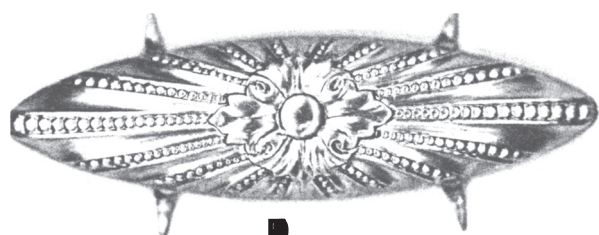

P7743

